
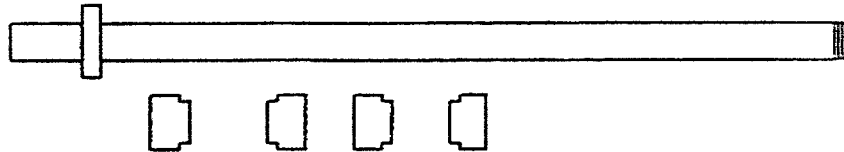


TOOL PEN

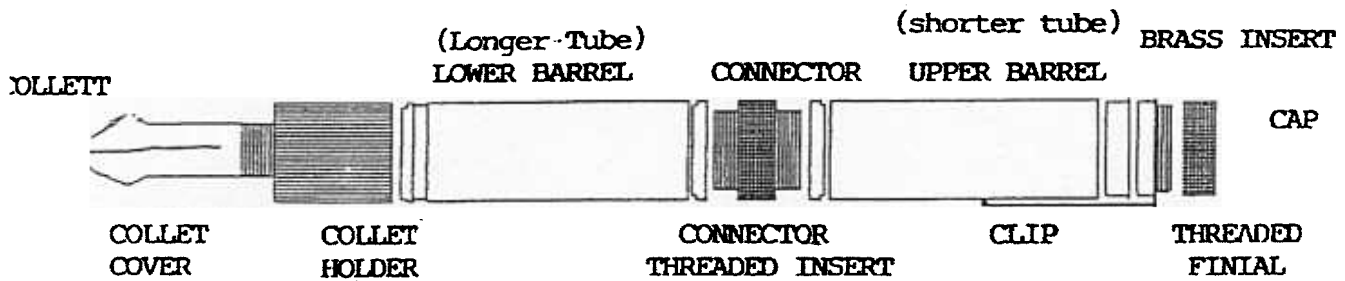

TOOL PEN

TOOLING

DRILL- 13/32

MANDREL-B

BUSHING- 10 B

WOOD 3/4" X 3/4"

TURNING INSTRUCTIONS

1. CUT WOOD BLANKS LENGTH OF TUBES (LITTLE LONGER TO SQUARE OFF).
2. DRILL WITH 13/32 BIT.
3. GLUE BRASS TUBE IN MATCHING WOOD BLANKS
4. SQUARE OFF BLANKS BEFORE OR AFTER TURNING.
5. TURN TO DEPTH COLLAR, SAND & POLISH. READY FOR ASSEMBLY.

ASSEMBLY INSTRUCTIONS

LOWER BARREL (LONGER TUBE)

1. PRESS CONNECTOR INSERT INTO ONE END OF TUBE.
2. PRESS COLLET HOLDER INTO OTHER END.
3. PLACE COLLET COVER OVER COLLET AND SCREW INTO COLLET HOLDER.

UPPER BARREL (SHORT TUBE)

1. PRESS CONNECTOR INSERT INTO ONE END OF BLANK.
2. PRESS BRASS INSERT INTO OTHER END..
3. SLIDE CLIP OVER UNTHREADED END OF THREADED FINIAL AND PRESS INTO BRASS INSERT.
4. SCREW ON CAP..
5. SCREW BOTH BARRELS TOGETHER WITH CONNECTOR.

WHEN NOT USING TOOLS DROP INTO EITHER BARREL FOR STORAGE. TO USE COLLET LOOSEN COLLET COVER, INSERT TOOL AND TIGHTEN COLLECT COVER DOWN. FLANGE ON SCREW DRIVERS SHOULD BE IN SLOTS OF COLLET.